




## Adjusting the Up and Down Stop Position

### To Change the Up Stop Position:

1. Move the EasyShade to its current Up (see **Figure 21**) position and **let it stop on its own.**
2. Press and hold the (UP) ▲ and (DOWN) ▼ buttons (see **Figure 23**) simultaneously until the EasyShade jogs or moves, then release.
3. Adjust to a new Up stop position.
4. Press and hold the (MY) my button until the EasyShade jogs or moves, then release.
5. Check the new Up position.

### To Change the Down Stop Position:

1. Move the EasyShade to its current Down (see **Figure 22**) position and **let it stop on its own.**
2. Press and hold the (UP) ▲ and (DOWN) ▼ buttons (see **Figure 23**) simultaneously until the EasyShade jogs or moves, then release.
3. Adjust to a new Down stop position.
4. Press and hold the (MY) my button until the EasyShade jogs or moves, then release.
5. Check the new Down position.

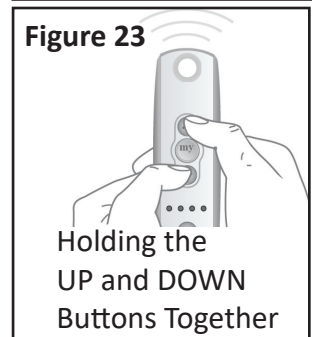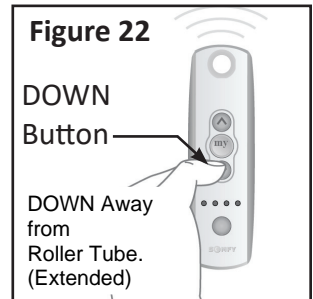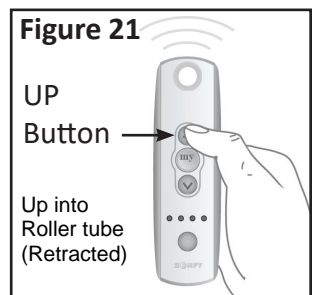

### Add/Delete a Remote Transmitter

To **ADD** an additional Remote Transmitter OR Wind Sensor.

- Press the Programming button on the back of the Remote Transmitter that was supplied with the EasyShade until the motor “jogs.”
- On the additional Remote Transmitter, press the Programming button until the motor “jogs,” then release.

To **DELETE** a Control Device, repeat the two steps listed above; the additional Control Device is removed.

## Factory Reset

Front View



Figure 25

1. Move the shade/screen to 1/2 way out position.
2. Press and Hold the **my** button; the red LED light will blink for at least 5 seconds, then release.
3. Disconnect Power (at the Wall outlet) for 2 full seconds.
4. Connect Power (at the Wall outlet) for 10 full seconds.
5. Disconnect (at the Wall outlet) Power for 2 full seconds.
6. Connect Power (at the Wall outlet). Your EasyShade should move then stop on its own.
7. Press and hold the **Programming** button for **ten seconds, watching for two separate jogs back and forth, several seconds apart.**  
**Note: A single jog is a quick two-direction movement of the motor.**
8. Press and Hold the **UP** and **DOWN** buttons together until your EasyShade jogs.  
**Note: The EasyShade now moves ONLY while holding down the UP or DOWN button.**

### SET PROPER DIRECTION OF MOTOR ROTATION

9. Press the **DOWN** button to check the direction of the motor.  
 The Solar Screen should roll out of the Aluminum Housing, from the side closest to the house.
10. If the direction is incorrect, change direction by holding the **my** button until the motor jogs.  
 Press the **DOWN** button again to check for the correct direction of the motor rotation.

### SET THE UP AND DOWN POSITIONS

11. Move the EasyShade to the desired **UP** position.
12. Press and Hold the **my** and **DOWN** buttons together, release when the EasyShade begins to move.
13. Press the **my** button to **Stop** the EasyShade at the desired **Down** setting.
14. Make desired adjustments to the **Down** position.
15. Press and Hold the **my** and **UP** buttons together; release them when the EasyShade begins to **move Up**. **Let the EasyShade stop on its own** at the **UP** position set in step 11.
16. Press and Hold the **my** button, release when the Motor jogs. This step stores the **Up** and **Down** position limits.
17. **Press and Hold the Programming button, wait for jog.** This exits the Programming Mode.
18. Process complete. Test the **Up** and **Down** stop position limits.

Rear View



Figure 26

**Note: If steps 8-15 fail, unplug the Power, plug back in, then begin again from step 8.**

---

### Add/Delete a Remote or Wind Sensor

To **ADD** an additional Remote Transmitter OR Wind Sensor.

- Press the Programming button on the back of the Remote Transmitter that was supplied with the EasyShade until the motor “jogs.”
- On the additional Remote Transmitter, press the Programming button until the motor “jogs,” then release.

To **DELETE** a Control Device, repeat the two steps listed above; the additional Control Device is removed.