




## Adjusting the Up and Down Stop Position

### To Change the Up Stop Position:

1. Move the EasyShade to its current Up (see **Figure 21**) position and **let it stop on its own.**
2. Press and hold the (UP) ▲ and (DOWN) ▼ buttons (see **Figure 23**) simultaneously until the EasyShade jogs or moves, then release.
3. Adjust to a new Up stop position.
4. Press and hold the (MY) my button until the EasyShade jogs or moves, then release.
5. Check the new Up position.

### To Change the Down Stop Position:

1. Move the EasyShade to its current Down (see **Figure 22**) position and **let it stop on its own.**
2. Press and hold the (UP) ▲ and (DOWN) ▼ buttons (see **Figure 23**) simultaneously until the EasyShade jogs or moves, then release.
3. Adjust to a new Down stop position.
4. Press and hold the (MY) my button until the EasyShade jogs or moves, then release.
5. Check the new Down position.

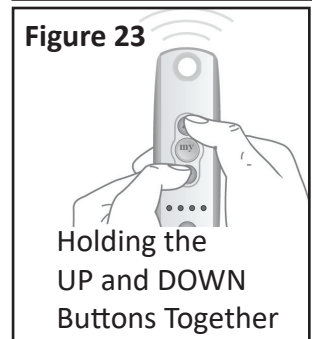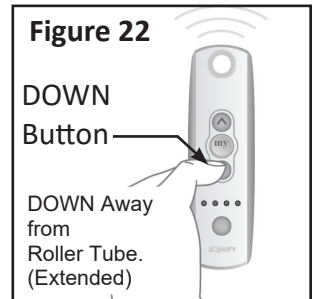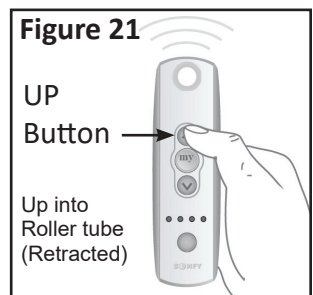

### Add/Delete a Remote Transmitter

To **ADD** an additional Remote Transmitter OR Wind Sensor.

- Press the Programming button on the back of the Remote Transmitter that was supplied with the EasyShade until the motor “jogs.”
- On the additional Remote Transmitter, press the Programming button until the motor “jogs,” then release.

To **DELETE** a Control Device, repeat the two steps listed above; the additional Control Device is removed.